




## Thank you for choosing The3DPC!

Velka 3 Case Feet install guided.

Tools needed: M3 Allen wrench and Phillips screwdriver

- 1) Follow Velkas's assembly instruction of Motherboard/Gpu install to remove the Motherboard tray and its components. *The PSU can stay in the case.*
- 2) With the front panel cover off and the Motherboard tray removed, locate the two hex-holes that you will be using to install the feet at the back of the case.

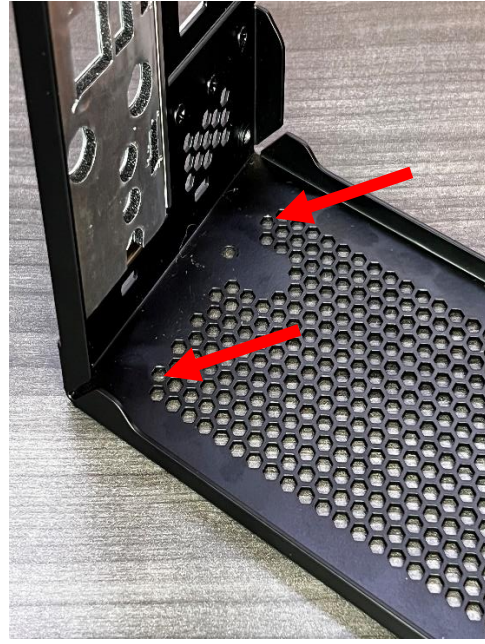

- 3) Once you have located the mounting position, place the right foot with the brass insert towards the back and thread a M3 x 6mm countersunk screw into the hold and tighten the foot down. *Leave slightly loose, you will tighten up later.*
- 4) Repeat for the left side. *Again do not completely tighten or over-tighten.*



- 5) Begin re-assembling the PC with Velkase's install guide. When you reach the side and front panel section, tighten down the countersunk screws. **DO NOT OVERTIGHTEN.** Also, make sure that the front of the feet mounting holes match up the front panel mounting holes.
- 6) With the all parts back inside the case and the side panels installed and tightened down, turn the case onto its top. Use the two M3 x 6mm button head screws to install the front of the feet into the lower mounting bracket of the front panel. **DO NOT OVERTIGHTEN.**



Enjoy!

