




Thank you for choosing The3DPC!


Velka 3 Inverted (PSU) Case Feet install guided.

Tools needed: M3 Allen wrench and Phillips screwdriver

- 1) Begin by removing the front and side panels from the case. This will allow access to the interior of the case for mounting the case feet.
- 2) With the panels removed, locate the two mounting hex-holes you will be using to mount the front of the case feet to the PSU (top) side of the case.

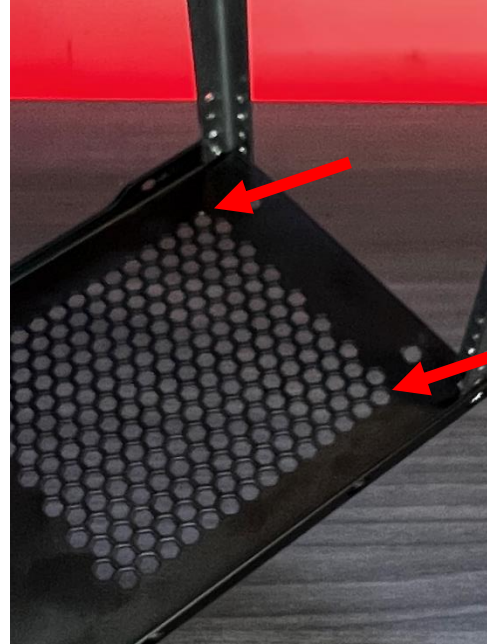

- 3) Once you have located the mounting position, place the right foot with the brass insert towards the front panel and thread a M3 x 6mm countersunk screw into the hold and tighten the foot down. *Leave slightly loose, you will tighten up later.*
- 4) Repeat for the left side. *Again, do not completely tighten or over-tighten.*

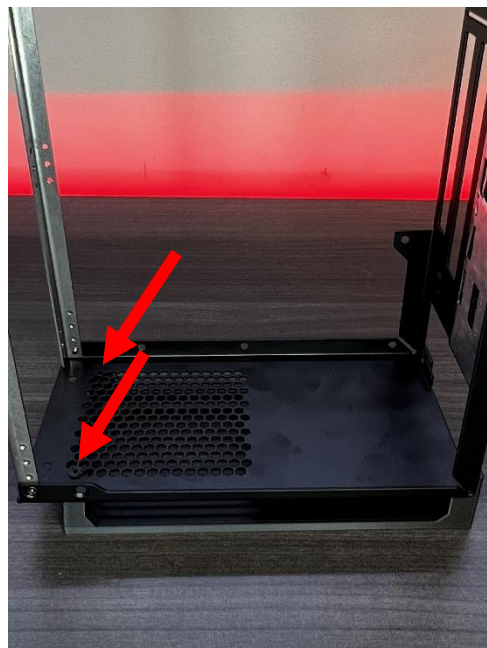

- 5) Begin re-assembling the side panels at the front of the case first. Before you install the front panel, tighten down the countersunk screws. **DO NOT OVERTIGHTEN.**



- 6) You can then re-install the front panel.

- 7) Finally, at the back of the case, begin installing the screws back into the case. Replace the top 6-32 x 6mm PSU screws with the includes 6-32 x 3/8 button head screws.

- 8) Enjoy!

