


Thank you for choosing The3DPC!

Fractal Design Ridge Case Feet


This instruction will cover the Fractal Design Ridge Case Feet

Tools needed: Phillips screwdriver


- 1) Begin by removing the double perforated panel per Fractal Design manual.

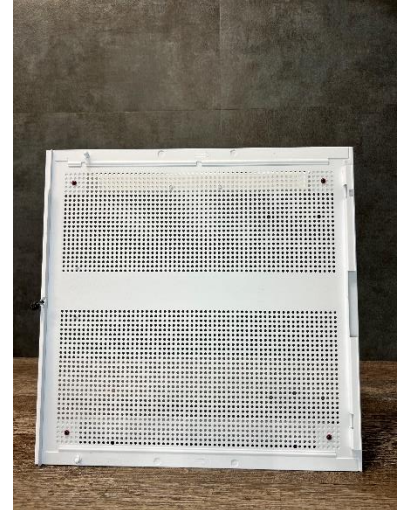

- 2) With the panel off thread a 2.5mm bolt through a red paper washer and insert through the underside of the panel (the part of the panel that is inside of the case when attached). Then, begin threading the screw into the brass insert of one of the case feet. Do not tighten up all of the way until you get the second screw threaded into the case feet. *NOTE: The feet should be oriented parallel to the to side panels. There is a stamped arrow on the inside of the panel, the feet should be installed parallel to. See red arrow in step 3.*

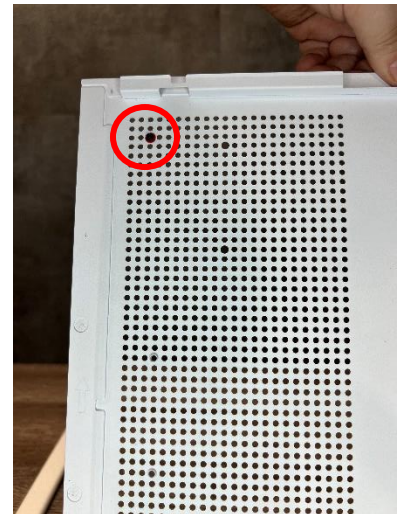

- 3) Install the second foot following step #2 instructions.

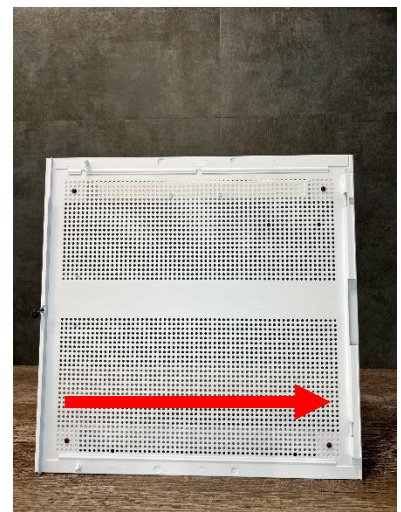

- 4) Make sure all screws are tightened down. Do not overtighten them. Install the panel per the Fractal Design install manual.

