



Thank you for choosing The3DPC!

SSUPD Fan Base

This instruction will cover the Meshlicious/Meshroom S 120mm & 140mm Base

Tools needed: Phillips screwdriver, knife, or razor blade, 6-32 feet screws (included with you SSUPD case kit)

- 1) Take your knife or razor blade and begin removing the rubber feet on you case. Place feet with adhesive down on the silver foil strip provide in you 3DPC kit. NOTE: *Use caution not to cut the feet or yourself.*




- 2) Foil Strip



- 3) Prep the base by installing you fan. If you bought a USB version, install that now as well. NOTE: *Pay attention to fan orientation for intake and exhaust side. If your fan's frame isn't marked with flow direction, typically the side with the case is exhaust.*



- 4) Once you have your fan and/or USB mounted place the base on the bottom of the case with the cutout to the back and the fan to the front of the case. Use the SSUPD provided 6-32 "feet" screws to mount the base to the bottom of the chassis.

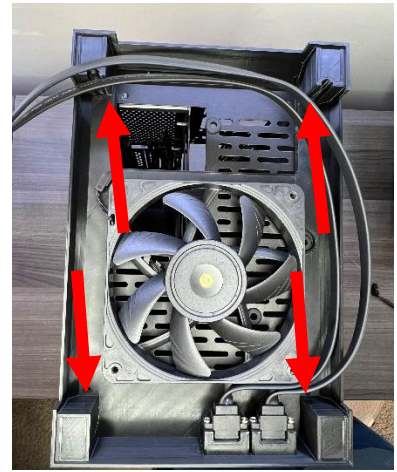

- 5) Route your fan cables and/or USB cables down through your case and to the Motherboard. Reapply your rubber feet onto the new base.



- 6) Enjoy cooler temps and added style with your The3DPC cooling base.

